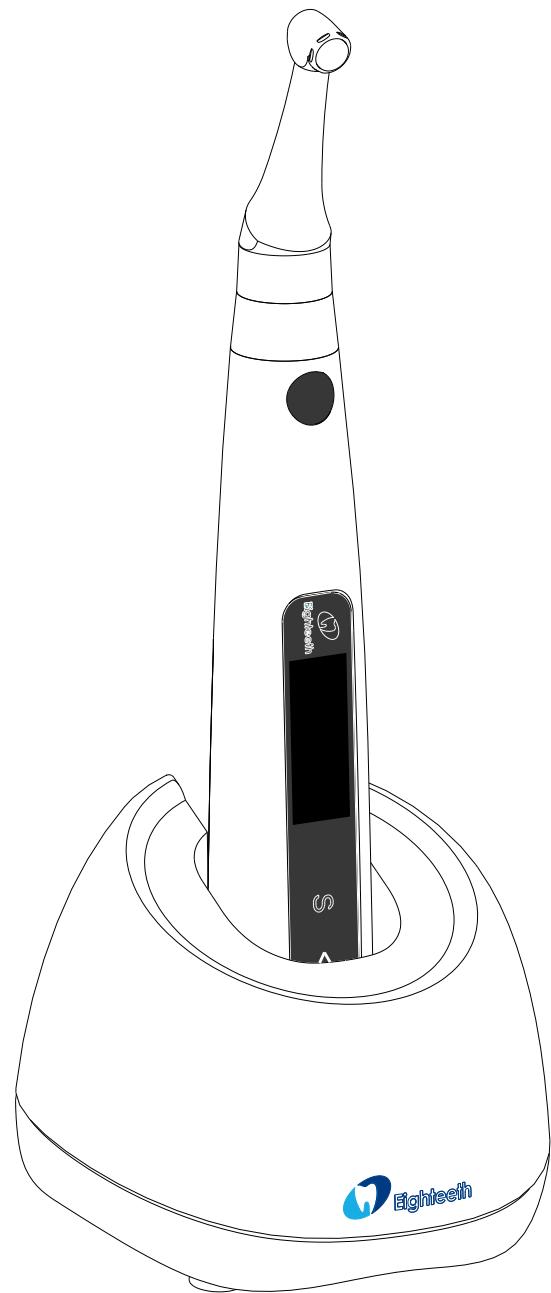




CE
0197



E-connect S
USER MANUAL

P/N: IFU-6035004

Version: 10

Revised: 2025.03.31

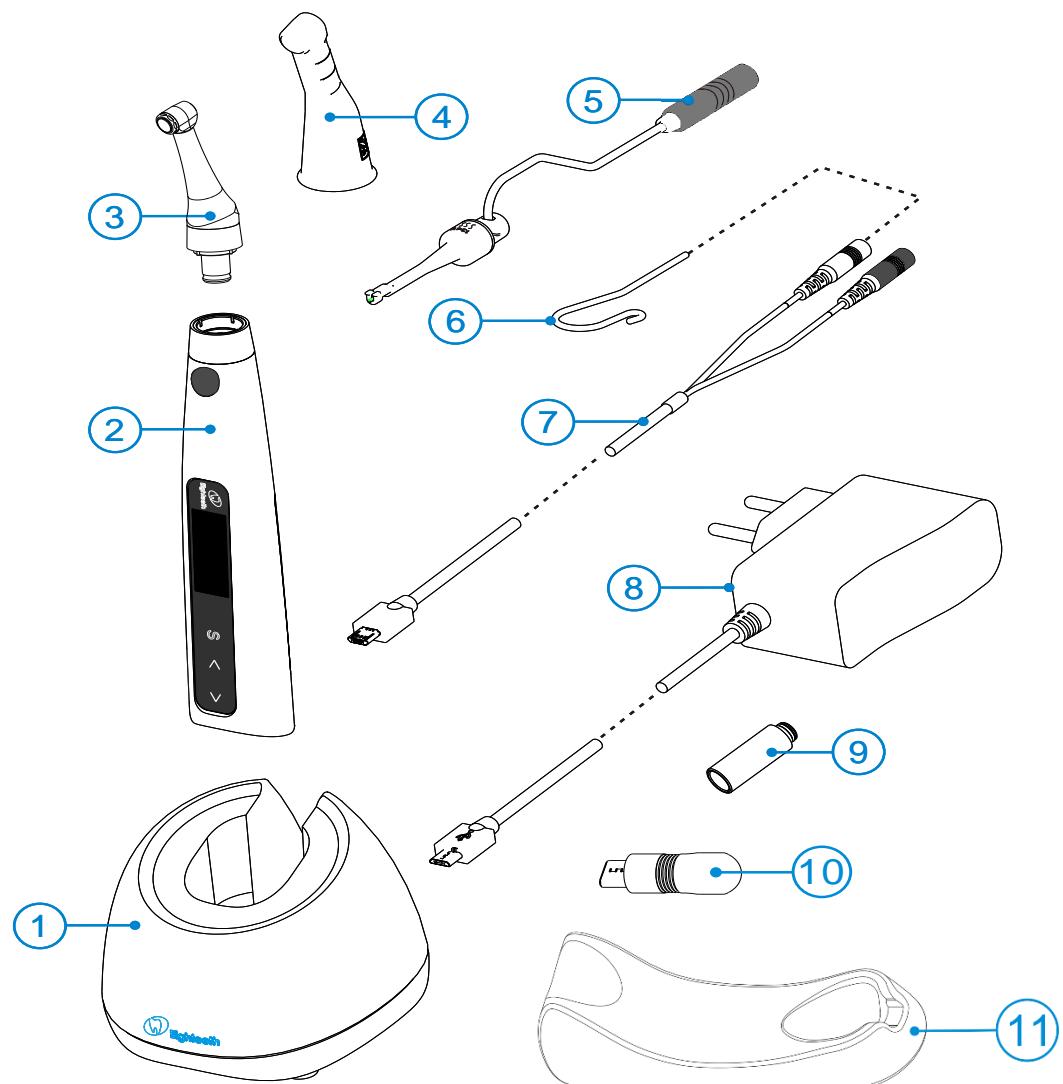
Size: 184mm*130mm

Content

1. Scope of E-connect S	4
1.1 Parts Identification.....	4
1.2 Components	5
1.3 Options.....	5
2. Symbols used in the User Manual.....	6
3. Before Use	7
3.1 Intended Use.....	7
3.2 Contraindications	7
4. Installing the E-connect S	9
4.1 Installation of the contra angle.....	9
4.2 Install the file	9
4.3 Connecting measuring wire	10
4.4 Connecting charge base	10
5. Use Interface	12
5.1 Panel key	12
5.2 Screen display	13
5.3 Terms and definition	15
6. Setting.....	16
6.1 Selecting memory	16
6.2 Setting parameters	16
6.3 Preset programs	19
6.4 Advanced setting	20
6.5 Parameter logic.....	21
7. Operation	24
7.1 Charge.....	24
7.2 Motor operation.....	25
7.3 Apex operation and not suitable condition.....	27
8. Cleaning, Disinfection and Sterilization	32
8.1 Foreword.....	32
8.2 General recommendations.....	32
8.3 Autoclavable Components	32
8.4 Daily maintenance	36
9. Error Warning	38
10. Troubleshooting.....	39
11. Technical Data	42
12. EMC Tables.....	43
13. Statement.....	47

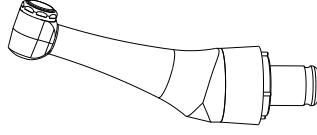


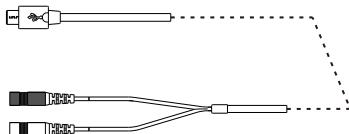




1. Scope of E-connect S

1.1 Parts Identification




- 1. Charge Base
- 2. Handpiece
- 3. Contra Angle
- 4. Insulating Sleeve
- 5. File Clip (2 pcs)
- 6. Lip Hook (2 pcs)
- 7. Measuring Wire
- 8. Adapter
- 9. Spray Nozzle
- 10. Apex Tester
- 11. Handpiece Base

1.2 Components

Charge Base (1pc) Part No: 6051036 	Handpiece (1pc) Part No: 6051150 	Contra Angle (1pc) Part No: 6036006 
Insulating Sleeve (1pc) Part No: 6004027 	File clip (2pcs) Part No: 6151012 	Lip Hook (2pcs) Part No: 6072002 
Measuring Wire (1pc) Part No: 6015011 	Adapter(1pc) Part No: 6016007 	Power Plug(1pc) Part No: 6016008 
Spray Nozzle (1pc) Part No: 6051038 	Apex Tester (1pc) Part No: 6015012 	

1.3 Options

Handpiece Base Part No: 6005002 		
---	--	--

2. Symbols used in the User Manual

	WARNING	If the instructions are not followed properly, operation may lead to hazards for the product or the user/patient.
	NOTE	Additional information, explanation of operation and performance.
	SN	Serial number
	REF	Catalogue number
	Manufacturer	
	Country of manufacture + Date of manufacture	
	Lot of manufacture	
	Class II equipment	
	Type B applied part	
	Direct current	
	Dispose of in accordance with the WEEE directive	
	Keep dry	
	Sterilizable in a steam sterilizer (autoclave) at the temperature specified	
	Authorized Representative in the European Community	
	CE marking	
	Temperature limitation	
	Humidity limitation	
	Atmospheric pressure limitation	
	Manufacturer's LOGO	
	Consult instructions for use	
	Washer-disinfector for thermal disinfection	

3. Before Use

3.1 Intended Use

E-connect S is a cordless endodontic treatment motorized handpiece with root canal measuring capability. It can be used to enlarge canals while monitoring the position of the file tip inside the canal. It can be used as a low-speed motorized handpiece and device for measuring canal length.

This device must only be used in hospital environments, clinics or dental offices by qualified dental personnel and not used in the oxygen-rich environment.

3.2 Contraindications

The integrated apex locator of the E-connect S is contraindicated in cases where patient/user carry medical implants such as pace makers or cochlear implants etc.

Do not use the device for implants or other non-endodontic dental procedures.

Safety and effectiveness have not been established in pregnant women and children.



WARNING

Read the following warnings before use:

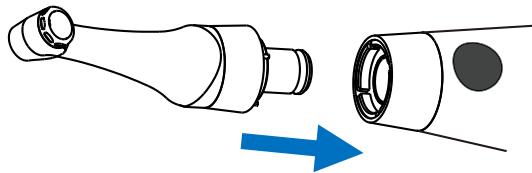
1. The device must not be placed in humid surroundings or anywhere where it can come into contact with any type of liquids.
2. Do not expose the device to direct or indirect heat sources. The device must be operated and stored in a safe environment.
3. The device requires special precautions with regard to electromagnetic compatibility (EMC) and must be installed and operated in strict compliance with the EMC information. In particular, do not use the device in the vicinity of fluorescent lamps, radio transmitters, remote controls and do not use this system near the active HF Surgical Equipment in the hospital. Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of the E-connect S, including cables specified by the manufacturer. Otherwise, degradation of the performance of this equipment could result. Do not charge, operate or store at high temperatures. Comply with the specified operating and storage conditions.
4. Gloves and a rubber dam are compulsory during treatment.
5. If irregularities occur in the device during treatment, switch it off. Contact the agency.
6. Never open or repair the device yourself, otherwise, void the warranty.
7. The maximum temperature of the applied part may reach 47.7 °C during operation. Do not use the equipment continuously for a long time. Please use the device strictly according to the user manual.
8. The equipment should only be repaired and used by professionals or trained

personnel.

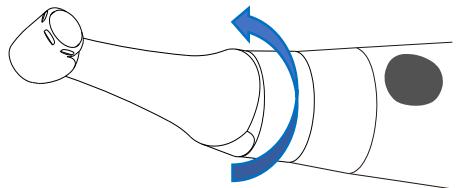
4. Installing the E-connect S

4.1 Installation of the contra angle

Make sure 4 pins on contra angle align the slots of handpiece, plug them together until it “clicks” securely into place.



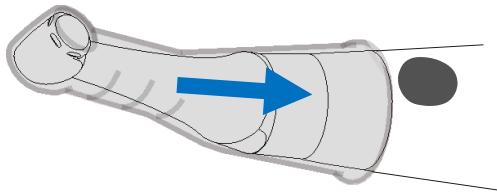
The contra angle can be 360 degrees rotated without take off, make it easy to watch the LCD in treatment by rotating the contra-angle.



WARNING

- Make sure the assembly is connected properly, otherwise might cause unexpected motor reverse, even hurt the patients
- After connecting the contra angle and handle, pull it gently to make sure the connection is good.
- Only the original contra angle could be used.

To improve insulation of the contra angle during apex measurement, we recommend using an insulating sleeve.



You can also use disposable sleeve (sold separately) instead of insulating sleeve



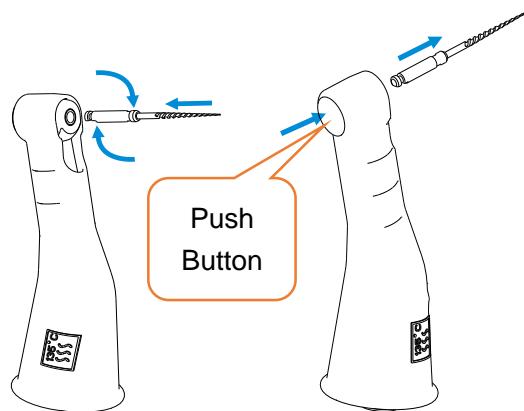
NOTE

Without the insulating sleeve, when performing the apex measurement with handpiece, wear appropriate insulated gloves, and make sure the contra angle does not touch the lips. It is advisable to use a rubber dam when performing such treatments.

4.2 Install the file

Turn the file back and forth until it is lined up with interior latch groove and slips into place, lock the file into the contra angle.

Hold down the push button on the contra angle and can release the file.

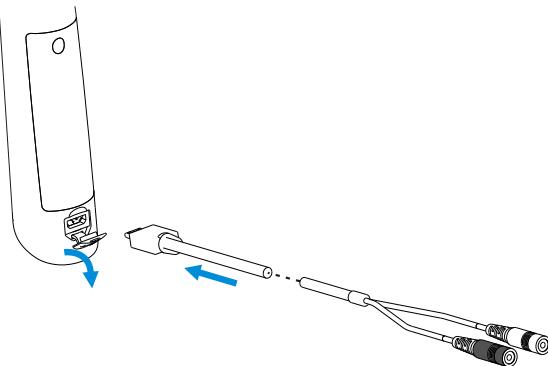


**WARNING**

- Inspect the file head before inserting the file. Do not use the damaged file head.
- Make sure the motor is stopped when inserting and removing files.
- Be careful when inserting and removing files to avoid injury to fingers.
- Take care not to touch the Main switch when putting files in, this will cause the file to rotate.
- Pull the file gently to make sure that the file is secure in handpiece properly, otherwise it may pop out and hurt the patient.

4.3 Connecting measuring wire

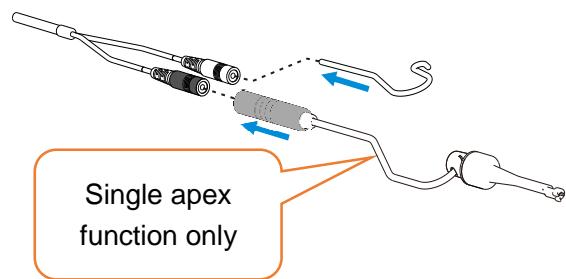
If want activity apex measurement function, uncap the USB cover on handpiece, insert measuring wire.



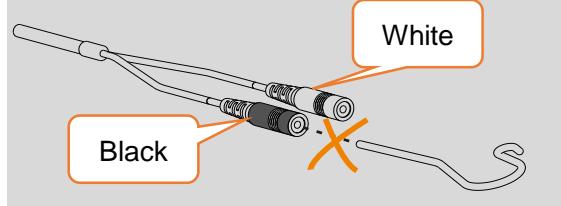
Insert lip hook into white slot, insert file clip into black slot.

**NOTE**

It's not necessary to connect file clip during motor combine apex function, only during single apex function.

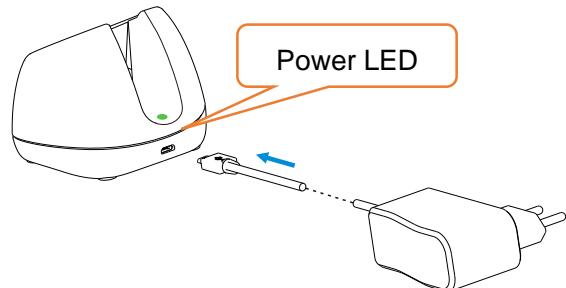
**NOTE**

Match colors to connect the lip hook and file clip, if connect lip hook with black slot, apex auto start will have no function.



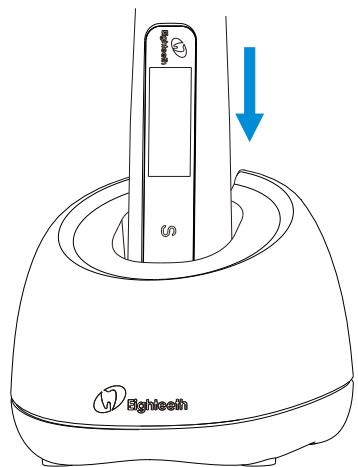
4.4 Connecting charge base

Plug the USB of adapter into the charge base, and plug the other end into a power outlet, the Power LED on charge base will light up (green).

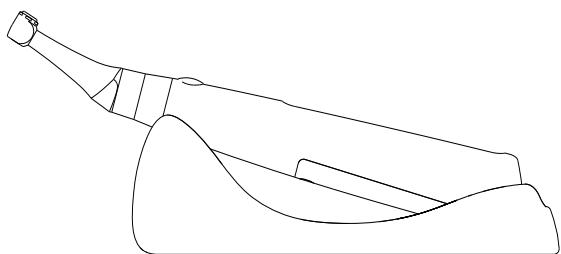
**NOTE**

Only the original adapter could be used.

Put the handpiece on the way into the charge base, the charge state will show on the screen.



If only need a base to put the device on dentist element of dental chair (without charge function), handpiece base is recommended (sold separately) to instead of charge base.

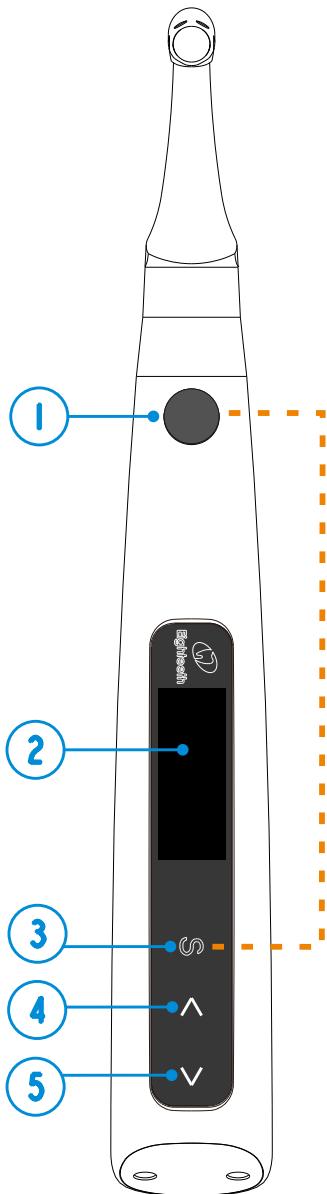
**NOTE**

Put the handpiece into the charge base in the right direction, otherwise the handpiece will not be charged.



5. Use Interface

5.1 Panel key



- ① • Main switch
- ② Display Screen
- ③ S Setting key
- ④ < Decrease key
- ⑤ > Increase key

Turn Power On

Press • more than 0.5 seconds to turn on the instrument

Memory Change

Press < or > during standby state

Operation mode Change

Press S once during standby state, press < or > to change, then press • or wait 5 seconds to confirm

Parameter Adjustment

Press S till target parameters, press < or > to adjust, then press • or wait 5 seconds to confirm

Preset Program Selection

Long press S to entry preset program during standby state, press < or > to change, then press • to confirm

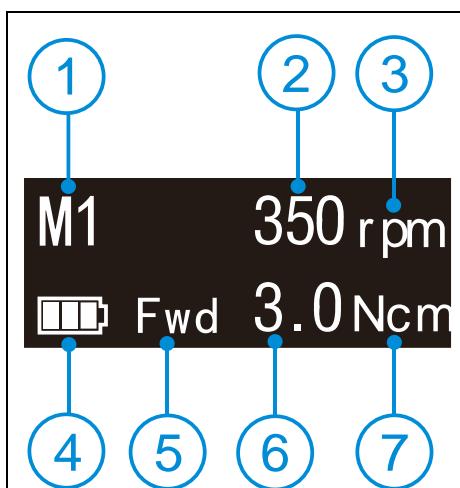
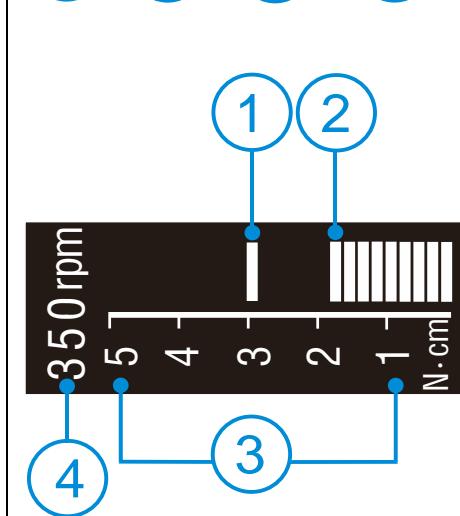
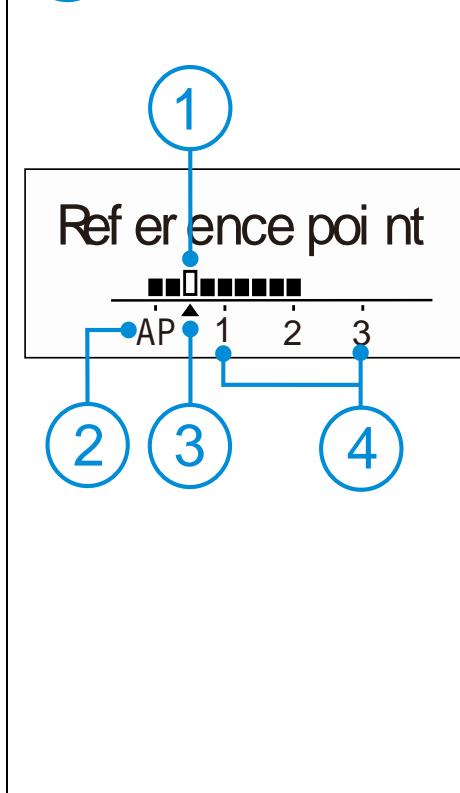
Turn Power Off

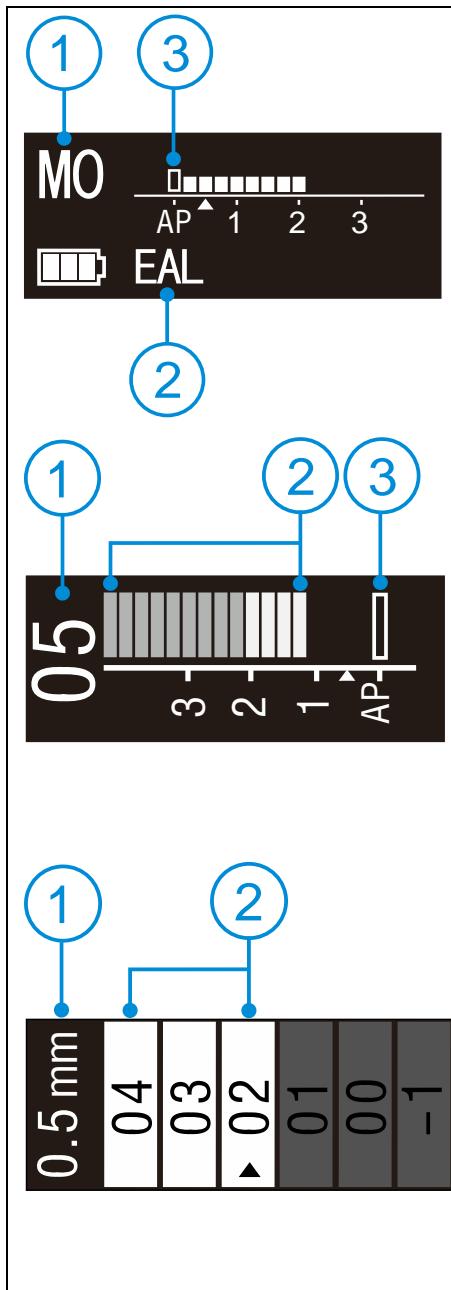
Holding down press S then press •

Advanced setting

During power off state, holding down press S then press • to entry advanced setting, Press S till target setting, press < or > to adjust, then press • to confirm

5.2 Screen display

	<p>Standby interface</p> <ul style="list-style-type: none"> ① Memory mode number ② Speed of this memory program ③ Unit of speed: Revolutions Per minute ④ Residual battery power ⑤ Operation mode ⑥ Torque of this memory program ⑦ Unit of torque: Newton centimeter
	<p>Standard working mode</p> <ul style="list-style-type: none"> ① The set maximum torque ② Real time torque ③ Torque display scale ④ The preset speed
	<p>Reference point interface</p> <ul style="list-style-type: none"> ① Flash bar of apical reverse position ② Apex (Major/Anatomic apical foramen) ③ 0.5mm meter reading (Very near Minor/Physiological apical foramen) ④ 1mm-3mm (Estimate dimension) distance scale from apex (Estimate dimension)



Canal measurement standby interface

- ① Memory mode number
M0 is apex stand-alone memory
- ② Electronic apex locator
- ③ Apex flash bar

Canal measurement start interface

- ① Indication number
The number has no represent of actual length, only for indication
- ② Canal length indicator bar
- ③ Apex flash bar (apex stand-alone mode) or reference point flash bar (motor combine with apex mode)

Canal measurement approach apex interface

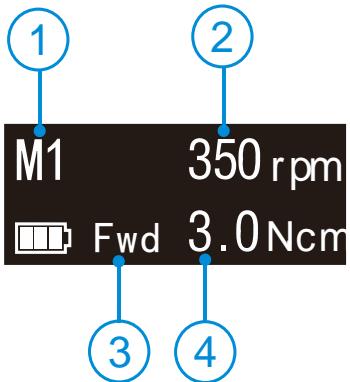
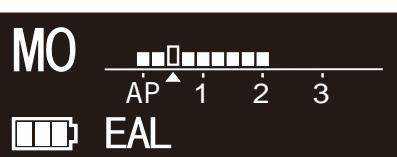
- ① The estimate dimension from apex (Major/Anatomic apical foramen)
- ② Canal length indicator bar

5.3 Terms and definition

Fwd	Forward (Clockwise rotation)
Rev	Reverse (Counter clockwise rotation) Be applied to special file, inject calcium hydroxide and other solutions
REC	Reciprocation Be applied to reciprocating file, path file and rotary file protection by setting some special angle
ATC	Adaptive torque control Up to setting torque, the motor will move with reciprocating mode; when torque reduce to normal value, the motor will clockwise rotate
EAL	Electronic apex locator In the mode, the device will work like a stand-alone apex locator
AP	Apex Major apical foramen or Anatomic apical foramen
R.L	Torque reverse less The motor will not reverse rotation no matter how large the torque load is
Reference point	During combined length determination, normally apical reverse must active before reaching major apical foramen, setting apical reverse position by change the flash bar
FWD Angle	Forward angle (Clockwise rotation angle), activating in REC and ATC operation mode
REV Angle	Reverse angle (Counter Clockwise rotation angle), activating in REC and ATC operation mode
Memory Mode	Such as M0-M10
Operation Mode	Such as FWD, REV, REC and ATC

6. Setting

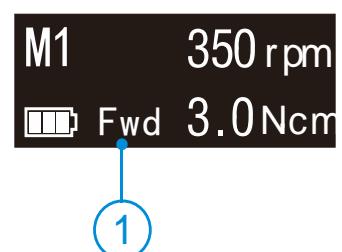
6.1 Selecting memory

	<p>E-connect S has 11 memory programs, press < or > to change during standby state, the memory number (1) will change according. M1-M10 is standard working memory for canal shaping, every memory has its own speed (2), mode (3) and torque (4), all these parameters can be changed (See chapter 6.2 Setting parameters).</p>
	<p>M0 is special memory for stand-alone apex locator function (See chapter 7.3 Apex operation and not suitable condition).</p>

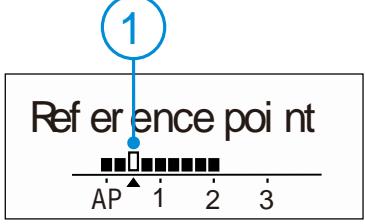
6.2 Setting parameters



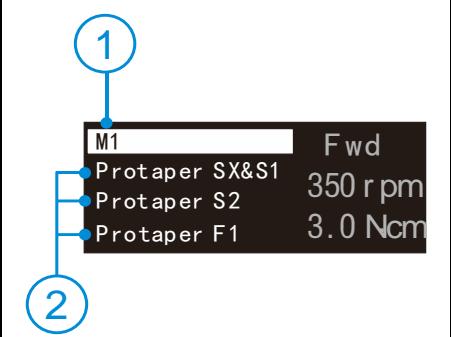
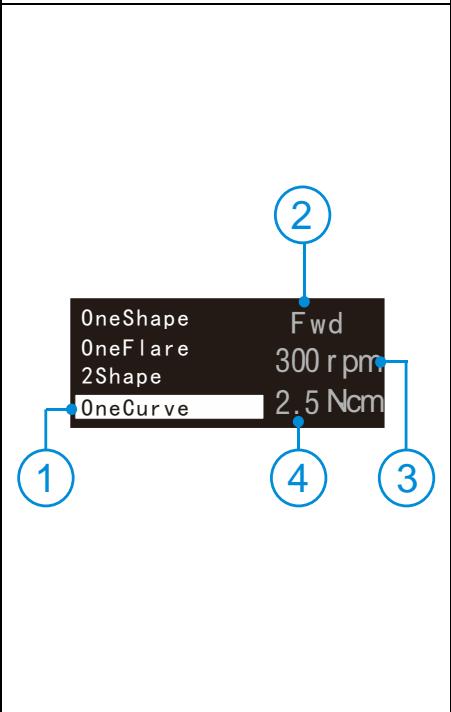
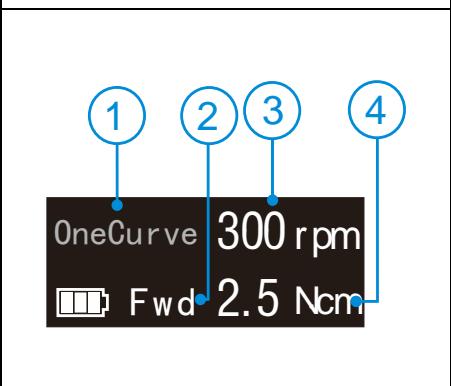
All the parameters must be set according to files, make sure all the parameters are expected before starting the motor, otherwise has risk of file broken.

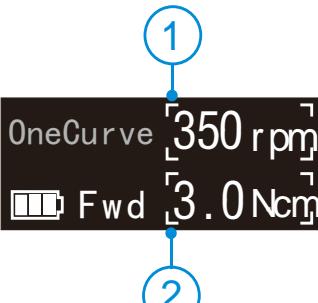
	<p>Before start the motor, check the operation mode (1) is correct, otherwise press S once during standby state, press < or > to change.</p>
	<p>E-connect S has 4 operation modes: FWD, REV, REC and ATC (See chapter 5.3 Terms and definition to get the explanations of these modes).</p>

	 NOTE When choice REV mode, a slow beep alarm sound appears after starting the motor, used for indicating counter clockwise rotation happening.
Repeatedly press S to check all the next level parameters of this operation mode are expected, press < or > to change if not.	 NOTE The parameter will differ in difference mode according to certain logic (See chapter 6.5 Parameter logic).
<div style="border: 1px solid black; padding: 5px; text-align: center;"> Speed 300 rpm </div>	The speed setting can be adjusted from 120 rpm to 1000 rpm.  NOTE The speed of REC and ATC operation mode is difference according to certain logic (See chapter 6.5 Parameter logic).
<div style="border: 1px solid black; padding: 5px; text-align: center;"> Torque Limit 3.0 N·cm </div>	The torque setting can be adjusted from 0.5 N·cm to 4.0 N·cm, and R.L (torque reverse less) is also available.  NOTE The torque of REC and ATC operation mode is difference according to certain logic (See chapter 6.5 Parameter logic).  WARNING When choice R.L (torque reverse less), a slow beep alarm sound appears after starting the motor. Be careful to use this function, very professional skill is needed, otherwise has risk of file broken.
<div style="border: 1px solid black; padding: 5px; text-align: center;"> Auto Start ON </div>	E-connect S integrated apex locator, if the lip hook is connecting with patient's lip, when the endo file entering root canal, the motor will start automatically. Press < or > to shut off this function if not expected, press • to start and stop the motor.  WARNING The motor will start automatically if handpiece

	(without insulating sleeve) or file touch the patient's lip or operator's fingers (without insulating glove), take care to avoid this, the file rotated by motor has risk of injure someone.
Auto Stop OFF	When the endo file out of root canal, the motor will not auto stop with default setting, Press < or > to select auto stop "ON" if needed.
Apical Action Reverse	<p>Because of integrated apex locator, when the file reaches the reference point, the motor will response according to setting, it can be Reverse, SlowDown, Stop and Off.</p> <p>Press < or > to change.</p> <p>Reverse: rotation direction changing till the file upward a little bit by operator, rotation direction will change back again.</p> <p>SlowDown: rotation slowdown when approach the reference point, will reverse if reach.</p> <p>Stop: rotation stop when reach the reference point, upward a little bit and will rotate again.</p> <p>Off: rotating as usual even if reach the reference point.</p>
	During combined length determination, normally apical reverse must active before reaching major apical foramen, Press < or > to set apical reverse position by change the flash bar (⌚), the motor will reverse while reaching the flash bar every time.
FWD Angle 120°	Activating in REC and ATC operation mode. forward angle (Clockwise rotation angle) can be adjusted by operator from 30° to 370°, Press < or > to change.
REV Angle 150°	Activating in REC and ATC operation mode. reverse angle (Counter Clockwise rotation angle) can be adjusted by operator from 30° to 370°, Press < or > to change.
	 NOTE <p>The sum of FWD Angle and REV Angle must be greater than 120°, the motor system has closed the angle not needed. For example: if you set FWD Angle 30°, the REV Angle must be setting greater than 90°.</p>

6.3 Preset programs

	<p>For convenience, we preset some common file system.</p> <p>Long press S to entry preset program during standby state, the interface will show as left.</p> <p>M1 (①) meanings the current memory mode, you can replace it by preset program (②) press < or > to change, then press • to confirm.</p>
	<p>If you selecting “OneCurve” (①), the operation mode (②), speed (③) and torque limit (④) will change according to the file system default setting.</p> <p>NOTE</p> <p>Protaper®, GATES®, Pro.Glider®, and Wave one® is a registered trademark of Dentsply.</p> <p>Mtwo®, Flex.Master®, Reciproc® and R-Pilot® is a registered trademark of VDW.</p> <p>K3XF®, TF® is a registered trademark of SybronEndo.</p> <p>OneG®, OneShape®, OneFlare®, 2Shape® and OneCurve® is a registered trademark of Micro-Mega</p> <p>XPendo.Shaper®, XPendo.Finisher®, iRace®, BT-Race® and BioRace® is a registered trademark of FKG</p>
	<p>And the memory mode (①) will change according, also operation mode (②), speed (③) and torque limit (④) will change according to the file system default setting.</p> <p>NOTE</p> <p>All of memory mode (from M1-M10) can be replaced with same mothed.</p>

	<p>The parameters of “OneCurve” can also be changed make it different from default setting, and there will be 4 corners around the parameter (①)(②).</p> <p>If want to change back to default setting, long press S to entry preset program during standby state, select “OneCurve” and press</p> <ul style="list-style-type: none"> • to confirm, the default setting will be recalled, and the 4 corners around will disappear. <p>If want to change back to M1 (or M2-M10), long press S to entry preset program during standby state, press < or > to select M1 (or M2-M10) again, then press • to confirm</p>
---	---



WARNING

Changing the default setting is not recommended only if you are very sure it can be changed, otherwise has risk of file broken.

6.4 Advanced setting

<p>Versions E.1.1.008</p>	<p>During power off state, holding down press S then press • to entry advanced setting, the version number software will appear on the display screen. E-connect S can update software very easy without tools and software. Contact your distributor to update if necessary.</p>
<p>Auto Power Off 10 Min</p>	<p>Press S again, the “Auto Power Off” time can be change, press < or > to adjust, then press • to confirm.</p> <p>The “Auto Power Off” time can be set from 3-15 minutes.</p>
<p>Auto Return time 5 Sec</p>	<p>Press S again, the “Auto Return time” can be change, it means when setting parameters just like speed and torque, the system will back to standby interface if there is no operation in 5 seconds.</p> <p>press < or > to adjust, then press • to confirm.</p> <p>The “Auto Return time” can be set from 3-15 seconds.</p>

Beeper Volume Vol . 2	Press S again, the “Beeper Volume” can be change, press < or > to adjust, then press • to confirm. The “Beeper Volume” can be set from 0-3.
Habit hand Right Hand	Press S again, the “Habit hand” can be change, press < or > to adjust, then press • to confirm. The right hand and the left hand can be set.
Start up memory M1	Press S again, the “Start memory” can be change, it means every time turn power on, which memory mode will appear first. press < or > to adjust, then press • to confirm. M1 and Last (the memory mode number when you turn power of) can be set.
Calibration OFF	Press S again, entry “Calibration” function, press < or > to select “ON”, press • to start calibration.  WARNING <ul style="list-style-type: none">Before calibrating, making sure the original contra angle is installed, and do not install the file.The torque will not correct if calibration without original contra angle or any load on contra angle chuck, and has risk of file broken.
Calibration 1000 rpm	The motor speed will increase from 120 to 1000 rpm. When the speed up to 1000 rpm, the calibration successful and automatic power off.
Restore settings OFF	Press S again, entry “Restore setting” function, press < or > to select “ON”, press • to start recovering, all the parameters be set by operator will be recovered by default factory setting (See chapter 6.5 Parameter logic).  NOTE After restore setting, all the parameters will be covered, record what you need before this operation.

6.5 Parameter logic

The default **memory settings** are listed below, the setting can be changed as needed.

Function	M1	M2	M3	M4	M5	M6	M7	M8	M9	M10
Operation Mode	FWD	FWD	REC	REC	ATC	ATC	REV	REV	FWD	FWD
Speed (rpm)	300	400	350	450	450	300	350	500	800	1000
Torque Limit (N·cm)	3.0	2.0	N/A	N/A	1.5	1.5	2.5	2.0	1.5	1.0
Auto Start	ON									
Auto Stop	OFF									
Apical Action	REV									
Reference point	02	02	02	02	02	02	02	02	02	02
FWD Angle	N/A	N/A	30	40	370	210	N/A	N/A	N/A	N/A
REV Angle	N/A	N/A	150	160	50	50	N/A	N/A	N/A	N/A

The default **advanced settings** are listed below, the setting can be changed as needed.

Auto Power off	10Min	Startup memory	M1
Auto Return time	5Sec	Language	English
Beeper Volume	2	Calibration	OFF
Habit hand	Right hand	Restore settings	OFF

The **speeds** (rpm) in different operation mode are not the same, details are listed below.

Fwd	Rev	REC	ATC
120 150 200 250 280 300 350 400 450 500 550 600 650 700 750 800 850 900 950 1000		150 200 250 300 350 400 450 500	

The **torques** (N·cm) in different operation mode are not the same, and even in the same operation mode, when the speed changing, the possible torque is difference, details are listed below.

Fwd/Rev (120-700rpm)	Fwd/Rev (750-1000rpm)	REC	ATC (150-500rpm)																																		
<table border="1"> <tr><td>0.5</td><td>0.8</td><td>1.0</td><td>1.5</td><td>1.8</td></tr> <tr><td>2.0</td><td>2.2</td><td>2.5</td><td>3.0</td><td>3.2</td></tr> <tr><td>3.5</td><td>4.0</td><td>R.L</td><td></td><td></td></tr> </table>	0.5	0.8	1.0	1.5	1.8	2.0	2.2	2.5	3.0	3.2	3.5	4.0	R.L			<table border="1"> <tr><td>0.5</td><td>0.8</td><td>1.0</td><td>1.5</td><td>1.8</td></tr> <tr><td>2.0</td><td></td><td></td><td></td><td></td></tr> </table>	0.5	0.8	1.0	1.5	1.8	2.0						<table border="1"> <tr><td>0.5</td><td>0.8</td><td>1.0</td></tr> <tr><td>1.5</td><td>1.8</td><td>2.0</td></tr> <tr><td>2.2</td><td>2.5</td><td>3.0</td></tr> </table>	0.5	0.8	1.0	1.5	1.8	2.0	2.2	2.5	3.0
0.5	0.8	1.0	1.5	1.8																																	
2.0	2.2	2.5	3.0	3.2																																	
3.5	4.0	R.L																																			
0.5	0.8	1.0	1.5	1.8																																	
2.0																																					
0.5	0.8	1.0																																			
1.5	1.8	2.0																																			
2.2	2.5	3.0																																			

The **FWD Angle** (degrees) and **REV Angle** (degrees) in different operation mode are not the same, details are listed below.

	Fwd	Rev	REC						ATC																								
FWD Angle		N/A	<table border="1"> <tr><td>30</td><td>40</td><td>50</td><td>60</td><td>70</td><td>80</td></tr> <tr><td>90</td><td>100</td><td>120</td><td>150</td><td>160</td><td>180</td></tr> <tr><td>200</td><td>230</td><td>250</td><td>260</td><td>280</td><td>300</td></tr> <tr><td>320</td><td>340</td><td>360</td><td>370</td><td></td><td></td></tr> </table>						30	40	50	60	70	80	90	100	120	150	160	180	200	230	250	260	280	300	320	340	360	370			The same with the front table
30	40	50	60	70	80																												
90	100	120	150	160	180																												
200	230	250	260	280	300																												
320	340	360	370																														
REV Angle		N/A	The same with the front table						The same with the front table																								


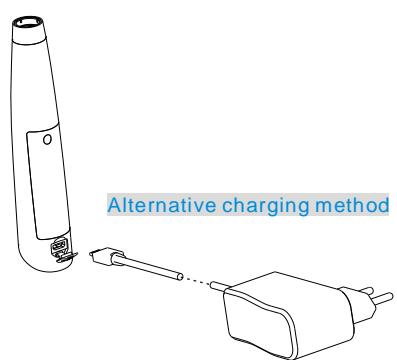


NOTE

The sum of FWD Angle and REV Angle must be greater than 120°, the motor system has closed the angle not needed. For example: if you set FWD Angle 30°, the REV Angle must be setting greater than 90°.

7. Operation

7.1 Charge

	<p>Displays the present remaining amount of the battery. Less than 15% remains, please charge.</p>
	<p> NOTE</p> <ul style="list-style-type: none"> • If the power is less than 15%, must be recharged within 30 days, otherwise the battery will be damaged. • If the device is not used for a long time, it should be charged at least once a month.
	<p>If continue to use, the torque and speed will be lower than the setting value, and low power warning will appear on screen, and the device will stop work.</p>
	<p> NOTE</p> <p>The remaining amount of battery mark indicates a voltage. When a load is applied to the Handpiece, the remaining amount of battery mark appears to become lower.</p>
 <p>Alternative charging method</p>	<p>Charge without charge base also available, using adapter connect to handpiece directly, the charge state will show on the screen.</p> <p>Charge with charge base is recommended (See chapter 4.4 Connecting charge base).</p> <p> WARNING</p> <p>Only the original adapter could be used. The USB connector on the handpiece can only be used to connect the original adapter for charging and connect the measuring wire when using the apex locator function. Connection to other outputs is not allowed, otherwise the device will be damaged.</p>

	<p>Charging indication appears on the screen, and flashes slowly (1), when battery is fully charged or in a state near full charge, the flash will stop and show like picture (2).</p> <p>Fully charged will take about 4 hours, depending on residual battery power and battery state.</p> <p>It can be recharged 300-500 times, depending on the operating conditions of the device.</p> <p>NOTE</p> <p>When charging, other function will forcibly stop, take from charge base, press main switch, the last function will recall.</p>
	<p>WARNING</p> <ul style="list-style-type: none"> Do not change the battery, only trained technician or distributor can change the battery, the electronic parts will be damaged if use a wrong battery or install with a wrong way. If the power goes out while charging, please check if the device is charging properly after the power is restored.

7.2 Motor operation

	<p>When using as a stand-alone motor, the torque bar will show on the screen (more information about torque bar, please see chapter 5.2 Screen display).</p>
<p>WARNING</p> <ul style="list-style-type: none"> Use the E-connect S outside the oral cavity to make sure that the device is functioning properly. Change file on time to avoid file separation within the canal. File may separate because of cyclic / torsional fatigue. Heavy force / hand pressure on endo motor while using may even cause file 	

separation.

- Do not press the button to release the files while the motor is running, otherwise the file may pop out and even hurt the patient.
- Electromagnetic noise in surroundings environment may interfere with the device operation, do not rely on device's automatic control completely, always pay attention to the feedback from display.



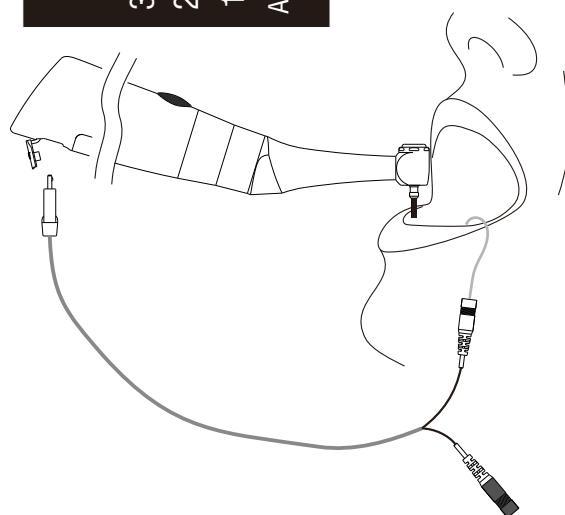
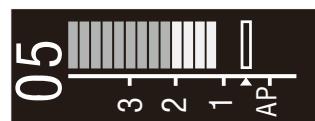
NOTE

If there is any abnormal functioning, stop using the device and report to company. The file separates more easily at high speeds, please follow the manufacturer's recommendations of the speed and check the settings of the Endo motor before use.

Do not use the files are except nickel-titanium or stainless steel.

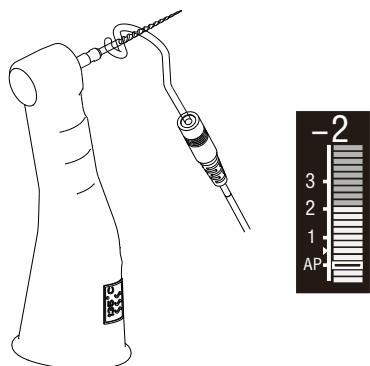
Gloves and a rubber dam are compulsory during treatment.

Do not forget to remove the file from the Contra-angle after its use.



When using motor combine apex function, the measure wire must be connecting with motor by USB socket, and white slot connects with lip by lip hook, keep the black slot idle.

The reference point bar will show on the screen (**more information about reference point bar, please see chapter 5.2 Screen display**).



NOTE

We strongly recommend check the function every time before use.

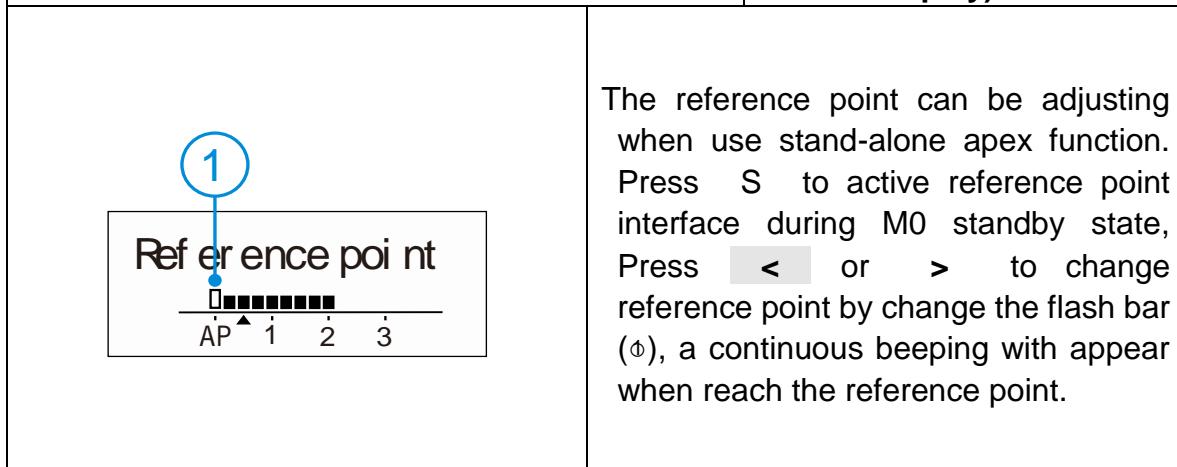
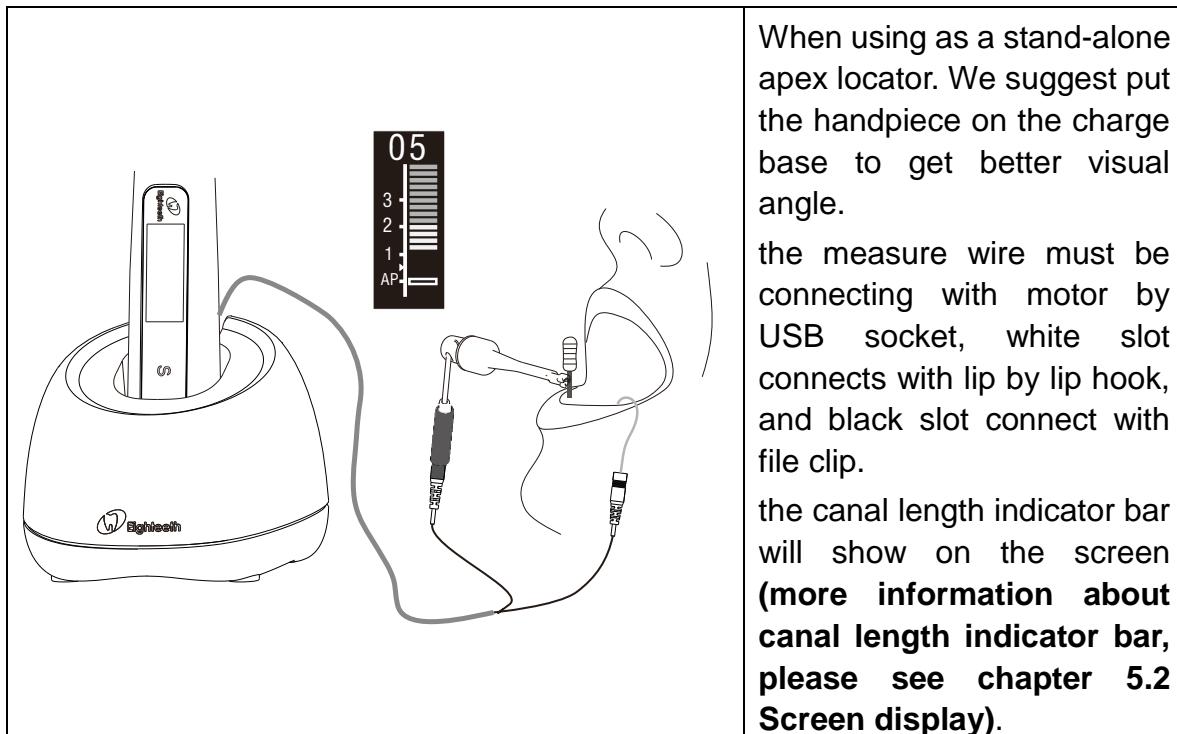
Touch the lip hook with the file in the contra angle and check that all the bars on the meter on the screen light up, and the motor should be reversed continuously.

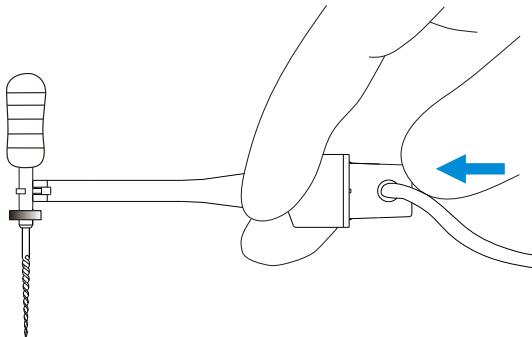
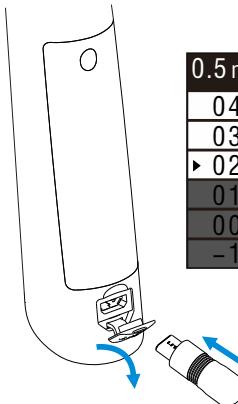
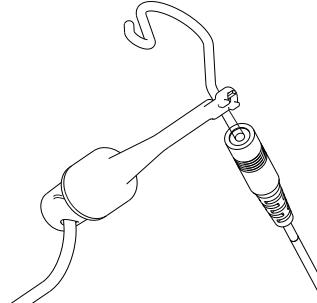
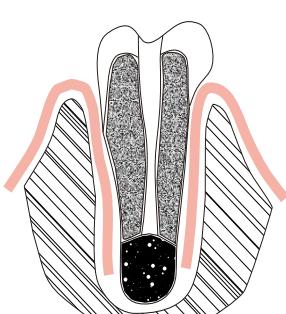
**NOTE**

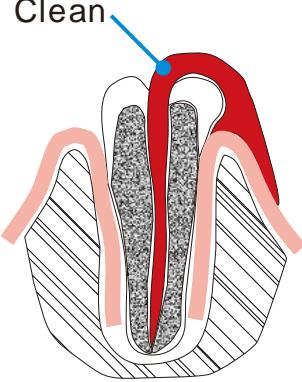
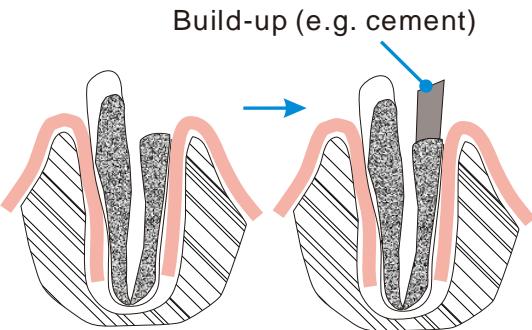
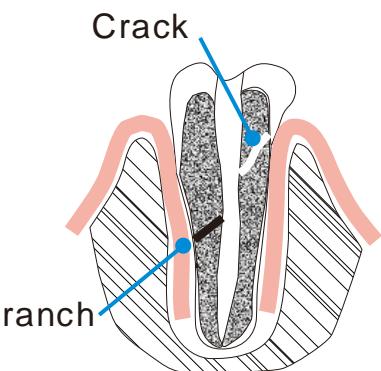
The will not be able to perform a precise measurement for every time, especially in cases of abnormal or unusual morphology of the root canal. The user need coordinate with x-ray to check the results of the measurement.

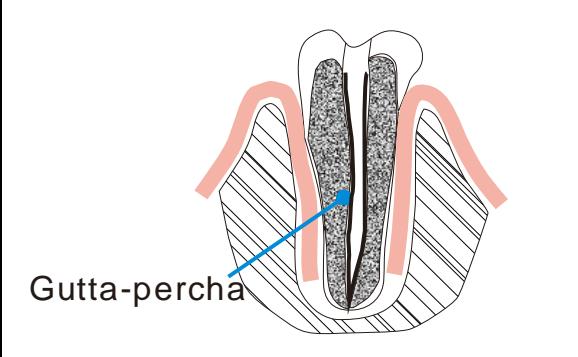
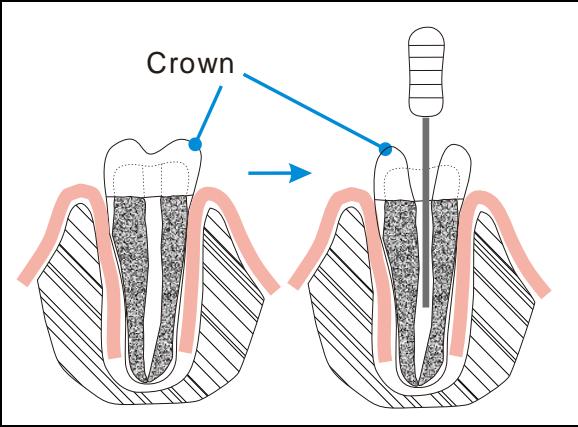
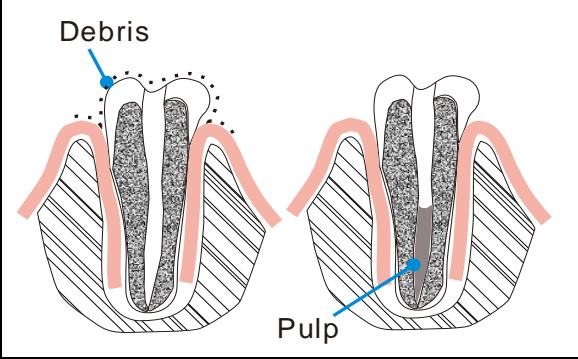
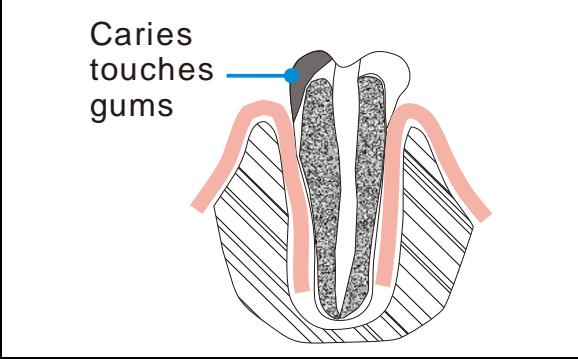
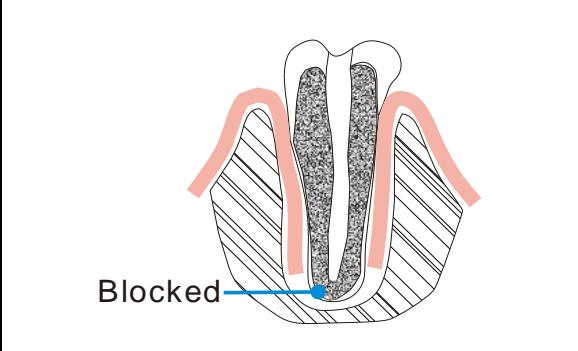
If the meter does not move when you enter the file, it is possible that the unit is not working normally, therefore, stop using.

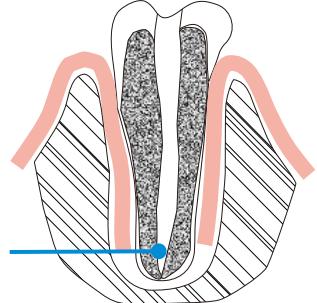
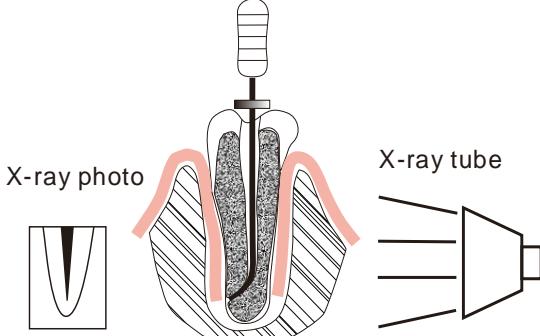
7.3 Apex operation and not suitable condition



	<p>! NOTE</p> <p>The file clip must hold the file correctly. Push the button of file clip in the direction shown by the arrow, clip the holder onto the metal upper part of the file and then release the button.</p> <p>The file clip must be nearly vertical with file handle, otherwise will damage the tip of the file holder.</p>
 <p>0.5 mm 04 03 ► 02 01 00 -1</p>	<p>! NOTE</p> <p>We recommend using Apex Tester to check the accuracy of apex locator every time before use.</p> <p>Insert the Apex Tester into handpiece USB socket during M0 mode, check the highlight number must between 01-03 (0.3mm-0.8mm on the top)</p>
 <p>OVER 04 03 ► 02 01 00 -1</p>	<p>! NOTE</p> <p>We recommend check the connection of apex locator every time before use.</p> <p>Touch the lip hook with metal part of file clip, check all the bars on the meter on the screen light up, and "over" flash on the top.</p>
<p>Unsuitable situation of root canals for Electric Measurement</p> <p>Cannot obtain precise measurements if the root canal conditions as below</p>	
	<p>Root canal with a large apical foramen</p> <p>The root canal cannot be accurately measured because of the lesion or incomplete development of the apical foramen. The results may show that the length measured is shorter than the actual one.</p>

	<p>Root canal blood overflow from the opening</p> <p>If blood spills from the root opening and contacts the gums, it will cause leakage of electricity, which cannot be accurately measured. Wait for the bleeding to stop completely. Clean the root canal and the opening, completely empty the root canal blood, and then measure it.</p> <p>The root canal uses a chemical solution to flow out from the opening</p> <p>If a chemical solution flows out of the root canal, it is impossible to get an accurate measurement.</p> <p>It is important to remove the overflow from the opening.</p>
	<p>Broken crown</p> <p>If the crown is broken, a segment of the gingival tissue enters the lumen, and the contact between the gingival tissue and the root file causes electrical leakage, which cannot be accurately measured. In this case, the appropriate material should be used to isolate the gingival tissue.</p>
	<p>The crack tooth Leakage through branch of the root canal</p> <p>Broken teeth can cause electrical leakage and cannot be accurately measured.</p> <p>Branch tubes can also cause leakage.</p>

	<p>Retreatment canal which was filled with gutta-percha</p> <p>The gutta-percha must be completely removed to eliminate its insulation, then pass a small file all the way through the apical foramen and then put a little saline in the canal, but do not let it overflow the canal opening.</p>
	<p>Crown or metal prosthesis that touches gingival tissue</p> <p>Accurate measurement cannot be obtained if the file touches a metal prosthesis that is touching gingival tissue. In this case, widen the opening at the top of the crown so that the file will not touch the metal prosthesis before taking a measurement.</p>
	<p>Cutting debris on tooth Pulp inside canal</p> <p>Remove all cutting debris on the tooth. Remove all the pulp inside the canal. Otherwise an accurate measurement cannot be obtained.</p>
	<p>Caries touching the gums</p> <p>In this case, electrical leakage through the caries infected area to the gums are impossible to obtain an accurate measurement.</p>
	<p>Blocked canal</p> <p>The meter will not run if the canal is blocked. Opening the canal all the way to the apical construction to measure it.</p>

	<p>Extremely dry canal If the canal is extremely dry, the meter may not work until it is quite close to the apex. In this case, try to moisten the canal with oxydol or saline.</p>
<p>Difference measuring result between Apex locator reading and Radiography Sometimes the reading of the apex locator reading does not correspond to the X-ray image. this does not mean inaccurate of apex locator or X-ray, depending on the angle of the X-ray beam, the root tip may not be displayed correctly. The position of the root tip seems to differ from its true position.</p>	
	<p>The X-ray photo shows that the actual apex of the root canal is not the same as the anatomic end. In fact, the apical foramen is located at the coronal end. in this case, X-ray may indicate that the file needle has not reached the apical foramen, even if it has actually reached the apical foramen.</p>

8.Cleaning, Disinfection and Sterilization

8.1 Foreword

For hygiene and sanitary safety purpose, the components (contra angle, file clip, lip hook and insulating sleeve) must be cleaned, disinfected and sterilized before each usage to prevent any contamination. This concerns the first use as well as the subsequent uses. Comply with your national guidelines, standards and requirements for cleaning, disinfection and sterilization.

Reprocessing procedures have only limited implications to this dental device. The limitation of the numbers of reprocessing procedures is therefore determined by the function / wear of the device. From the processing side there is no maximum number of allowable reprocessing. The device should no longer be reused in case of signs of material degradation.

In case of damage the device should be reprocessed before sending back to the manufacturer for repair.

8.2 General recommendations

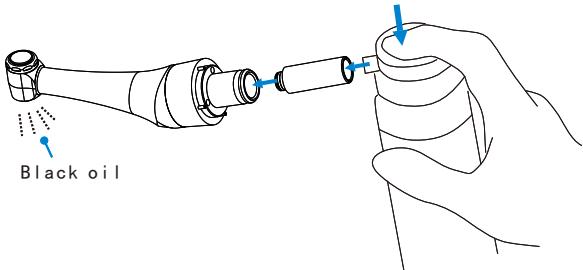
- The user is responsible for the sterility of the product for the first cycle and each further usage as well as for the usage of damaged or dirty instruments, where applicable after sterility.
- For your own safety, please wear personal protective equipment (gloves, safety glasses, etc.).
- Use only a disinfecting solution which is approved for its efficacy (VAH/DGHM-listing, CE marking, and FDA approval) and in accordance with the DFU of the disinfecting solution manufacturer.
- The water quality has to be convenient to the local regulations especially for the last rinsing step or with a washer-disinfector.
- Thoroughly clean and wash the components before autoclaving.
- Do not lubricate the Handpiece.
- Do not clean the contra angle with an ultrasonic cleaning device.
- Do not use bleach or chloride disinfectant materials.

8.3 Autoclavable Components

Autoclavable Components			
Contra Angle	Lip Hook	File Clip	Insulating Sleeve

 WARNING <ul style="list-style-type: none"> Only the components above can be autoclaved. Before first use and after each use, sterilize the above components. 	
Reprocessing Instructions	
Preparation at the Point of Use:	<p>Disconnect the components (Contra Angle, Lip Hook, File clip, Insulating Sleeve) from the handpiece. Refer to "Chapter 4-Installing the E-connect S" of this manual for disassembly instructions. Remove gross contaminations from the components with cold water (<40°C) immediately after use. Don't use a fixating detergent or hot water (>40°C) as this can cause the fixation of residuals which may influence the result of the reprocessing process.</p> <p>Store the instruments in a humid surrounding.</p>
Transportation:	<p>Safe storage and transportation to the reprocessing area to avoid any damage and contamination to the environment.</p>
Preparation for Decontamination:	<p>The devices must be reprocessed in a disassembled state.</p>
Pre-Cleaning:	<p>Do a manual pre-cleaning, until the components are visually clean. Submerge the components in a cleaning solution and flush the lumens with a water jet pistol with cold tap water for at least 10 seconds. Clean the surfaces with a soft bristol brush.</p>
Cleaning:	<p>Regarding cleaning/disinfection, rinsing and drying, it is to distinguish between manual and automated reprocessing methods. Preference is to be given to automated reprocessing methods, especially due to the better standardizing potential and industrial safety.</p>

	<p>Automated Cleaning:</p> <p>Carefully put the components into the washer-disinfector on a tray and set the parameters as follows, then start the program:</p> <ul style="list-style-type: none"> • 4 min pre-washing with cold water (<40°C); • emptying • 5 min washing with a mild alkaline cleaner at 55°C; • emptying • 3 min neutralising with warm water (≥40°C); • emptying • 5 min intermediate rinsing with warm water (≥40°C); • Emptying <p><i>The automated cleaning processes have been validated by using 0.5% neodisher MediClean forte (Dr. Weigert).</i></p> <p>Note Acc. to EN ISO 17664 no manual reprocessing methods are required for these devices. If a manual reprocessing method has to be used, please validate it prior to use.</p>
	<p>Disinfection:</p> <p>Automated Thermal Disinfection in washer/disinfector under consideration of national requirements in regards to A0 value (see EN ISO 15883). A disinfection cycle of 5 min disinfection at 93°C has been validated for the device to achieve an A0 value of 3000.</p>
	<p>Drying:</p> <p>Automated Drying: Dry the devices according to the drying program of the washer/disinfector by setting parameter to 120°C,15min. After automated drying, insufflate cavities of instruments for at least 3 minutes by using sterile compressed air.</p>
<p>Functional Testing, Maintenance:</p>	<p>Visual inspection for cleanliness of the instruments and reassembling. Functional testing according to instructions of use. If necessary, perform reprocessing process again until instrument is visibly clean. Before packaging and autoclaving, make sure that the</p>

	<p>components have been maintained acc. to manufacturer's instruction.</p> <p>Only the contra angle needs to be lubricated.</p>  <div style="background-color: #f0f0f0; padding: 10px; border: 1px solid #ccc; margin-top: 10px;"> <p>⚠️ WARNING</p> <ul style="list-style-type: none"> • Before autoclaving, the contra angle must be lubricated. • Attaching the spray nozzle to oil can and contra angle, press the oil can button more than 3 seconds, till all the black oil flow out from the head of the contra angle. Placing the contra angle upright for 1-3 hours to make sure there is no residual oil inside. • Make sure the contra angle is clean and without residual oil inside before using. </div>
Packaging:	<p>Pack the instruments in an appropriate packaging material for sterilization.</p> <div style="background-color: #f0f0f0; padding: 10px; border: 1px solid #ccc; margin-top: 10px;"> <p>⚠️ WARNING</p> <ul style="list-style-type: none"> • Check the validity period of pouch given by the manufacturer to determine the shelf life. • Use pouches which resist to a temperature up to 141 °C and in accordance with EN ISO 11607. </div>
Sterilization:	<p>Sterilization of instruments by applying a fractionated pre-vacuum steam sterilization process (according to EN 285/EN 13060/EN ISO 17665) under consideration of the respective country requirements.</p> <p>Sterilization parameters: 134 °C, 5 minutes, dry 8 minutes. Flash sterilization is not allowed on lumen instruments!</p> <div style="background-color: #f0f0f0; padding: 10px; border: 1px solid #ccc; margin-top: 10px;"> <p>⚠️ WARNING</p> <ul style="list-style-type: none"> • Use only approved autoclave devices according to EN 13060 or EN 285. • Use a validated sterilization procedure according to EN ISO 17665. • Respect the maintenance procedure of the autoclave device given by the manufacturer. </div>

	<ul style="list-style-type: none"> • Use only this recommended sterilization procedure. • Control the efficiency (packaging integrity, no humidity, color change of sterilization indicators, physicochemical integrators, digital records of cycles parameters). • The sterilization procedure must comply with EN ISO 17665. • Wait for cooling before touching.
Storage:	<p>Storage of sterilized instruments in a dry, clean and dust free environment at modest temperatures, refer to label and instructions for use.</p> <p> WARNING</p> <ul style="list-style-type: none"> • Sterility cannot be guaranteed if packaging is open, damaged or wet. • Check the packaging and the contra angle before using it (packaging integrity, no humidity and validity period).
Reprocessing validation study information:	<p>The above-mentioned reprocessing process (cleaning, disinfection, sterilization) has been successfully validated.</p>
<p> NOTE</p> <p>The instructions provided above have been validated by the manufacturer of the medical device as being capable of preparing a medical device for use. It remains the responsibility of the processor to ensure that the processing, as actually performed using equipment, materials and personnel in the processing facility, achieves the desired result. This requires verification and/or validation and routine monitoring of the process. Likewise, any deviation by the processor from the instructions provided should be properly evaluated for effectiveness and potential adverse consequences.</p>	

8.4 Daily maintenance

Daily maintenance
<p>Maintenance:</p> <p>When necessary, wipe all the surfaces of components (handpiece, charge base, measuring wire, handpiece base) with a cloth lightly moistened with Ethanol for Disinfection (Ethanol 70 to 80 vol%) at least 2 min, repeat for 5 times.</p>
<p> NOTE</p> <ul style="list-style-type: none"> • Do not use anything except Ethanol for Disinfection (Ethanol 70 to 80 vol%).

- Do not use too much ethanol as it's going into machine and damage the components inside.
- When in use, the handpiece should be wrapped with a medical isolation film.

9.Error Warning

Overload Restart Motor	When setting the torque limit as R.L or during reverse processing, the Overload warning may appear on the screen, it means a large load happened greater than the motor force. Press the Main switch to restart motor.
Overheat See user manual	The temperature of motor is higher than expectation, turn the power off and waiting more than 5 minutes to let it cold down.
HWFault See user manual	Hardware of the handpiece broken, contact your distributor.
MotorFault See user manual	Motor of the handpiece broken, contact your distributor.
LowPower Please Charge	The power is very low, charge it immediately

10.Troubleshooting

When trouble is found, check the following points before contacting your distributor. If none of these are applicable or the trouble is not remedied even after action has been taken, the product may have failed. Contact your distributor.

Problem	Cause	Solution	Ref. chap
The power is not turned on.	The battery is flat.	Charge the battery.	7.1
	Press the main switch too short time.	Press the main switch more than 0.5 seconds.	5.1
The power LED on charge base does not light.	Using a wrong adapter.	Use the original adapter.	4.4
	The adapter is not connected.	Check the connection.	4.4
	The plug of the adapter is not inserted into the outlet.	Check the connection.	/
	There is no electricity in the outlet.	Check the connection.	/
No charge indicator flash on handpiece screen	Put the handpiece into the charge base in the wrong direction.	Check the direction.	4.4
	Charge pin of charge base unable to rebound.	Remove debris which between move part and base of the charge pin.	/
	Contactors are dirty.	Cleaning the surface of contactors.	/
	The charge base broken.	using adapter connect to handpiece directly, and Contact your distributor.	/
Handpiece screen does not appear	The handpiece broken.	Check if there is a sound of beep or motor, and Contact your distributor.	/
The motor doesn't rotate.	M0 mode is stand-alone apex locator function.	Changing to M1-M10.	6.1
	The contra-angle is clogged	Clean or replace the contra-angle.	/
	Motor is protected by system or broken.	Check the error warning.	9
Motor does not run when the file	The measure wire connecting not properly.	Check the connection.	4.3

is inserted in the canal.	The lip hook not properly hooked in the corner of the patient's mouth.	Check the connection.	7.2 7.3
	The Auto start function is OFF	Turn the auto start function ON if necessary.	6.2
The motor Can't stop.	The Auto stop function is OFF.	Press main switch to stop it, setting Auto stop function ON if necessary.	6.2
	There is a short circuit inside the Handpiece or the Handpiece cord.	Press "S" button to stop the motor and contact your distributor.	/
Motor spontaneously starts running in reverse.	Up to setting torque limit.	Check the torque limit is enough or not.	6.2
	Apical action setting to Reverse	Change setting if it's not expected.	6.2
	Setting to REV mode.	Change setting if it's not expected.	6.2
Motor does not reverse.	R.L mode is set.	Change setting if it's not expected.	6.2
	Torque reverse setting might be too high.	Change setting if it's not expected.	6.2
	Apical action setting Stop or OFF.	Change setting if it's not expected.	6.2
Motor speed changes spontaneously.	Apical action setting Slow Down.	Change setting if it's not expected.	6.2
Motor alternates between forward and reverse rotation.	Operation mode setting to REC or ATC.	Change setting if it's not expected.	6.2
No sound.	Beep volume set to 0.	Set beep volume to 1, 2 or 3.	6.4
Beep sound an alarm even though the instrument is not being used.	The motor is set to REV or R.L mode.	If it is the expected mode, ignore the alarm.	6.2
Canal measurement is unstable.	Complex root canal environment.	Check situation of root canals.	7.3

Cannot make a measurement.	Measure wire, lip hook or file clip connecting not properly.	Check the connection.	7.2 7.3
	Lack electrical conductivity between the shank and the file.	Use a file that has conductivity.	/
	Unsuitable situation of root canals.	Check the root canal environment.	7.3

11. Technical Data

Manufacturer	Changzhou Sifary Medical Technology Co.,Ltd
Model	E-connect S
Dimensions	21.5cm x 17.5cm x 9cm±1cm (Outer box)
Weight	1kg±10%
Contra-angle	Contra-angle compatible with rotary and reciprocating instruments, equipped with φ2.35 mm nickel titanium root canal file conforming to ISO 1797:2017, Type 1, Files length 11-31mm. The gear ratio of contra angle is 1:1.
Power supply	Lithium ion battery: 3.7V, 1500mAh, ±10%
Charger power supply	AC 100-240 V, ±10%
Charger power output	5V...1A
Frequency	50/60Hz, ±10%
Charger nominal power input	5.5VA
Torque range	0.5N·cm – 4N·cm
Speed range	120-1000 rpm
Type of protection against electrical shock	Class II and internally powered equipment
Applied part	B (Contra angle, File clip, Lip hook, Insulating sleeve)
Operation mode	Non-continuous, duty cycle: ON 5 mins, OFF 5 mins
Operation conditions	Use: in enclosed spaces Ambient temperature: 5°C ~ 40 °C Relative humidity: <80% Operating altitude < 3000m above sea level Atmospheric pressure: 70kPa ~ 106kPa
Transport and storage conditions	Ambient temperature: -20 °C ~ +55 °C Relative humidity: 20% ~ 80 % Atmospheric pressure: 70kPa ~ 106kPa

12.EMC Tables

Guidance and manufacturer's declaration – electromagnetic emissions		
The E-connect S is intended for use in the electromagnetic environment specified below. The customer or the user of the E-connect S should assure that it is used in such an environment.		
Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The E-connect S uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The E-connect S is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC61000-3-2	Class A	
Voltage fluctuations/flicker emissions IEC 61000-3-3	Complies	

Guidance and manufacturer's declaration – electromagnetic immunity			
The E-connect S is intended for use in the electromagnetic environment specified below. The customer or the user of the E-connect S should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	+/- 8 kV contact +/- 2 kV, +/- 4 kV, +/- 8 kV, +/- 15 kV air	+/- 8 kV contact +/- 2 kV, +/- 4 kV, +/- 8 kV, +/- 15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrical fast transients/bursts IEC 61000-4-4	\pm 2kV 100kHz repetition frequency	\pm 2kV 100kHz repetition frequency	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	Line to line: \pm 0.5kV, \pm 1kV Line to earth: \pm 0.5kV, \pm 1kV, \pm 2kV	Line to line: \pm 0.5kV, \pm 1kV Line to earth: \pm 0.5kV, \pm 1kV, \pm 2kV	Mains power quality should be that of a typical commercial or hospital environment.

Voltage dips IEC 61000-4-11	0% UT; 0.5 cycle at 0°, 45°, 90°, 135°, 180°, 225°, 270°, and 315°	0% UT; 0.5 cycle at 0°, 45°, 90°, 135°, 180°, 225°, 270°, and 315°	Mains power quality should be that of a typical commercial or hospital environment. If the user of devices require continued operation during power mains interruptions, it is recommended that devices be powered from an uninterruptible power supply or a battery
	0% UT; 1 cycle and 70% UT; 25/30 cycles sine phase at 0°	0% UT; 1 cycle and 70% UT; 25/30 cycles sine phase at 0°	
Voltage interruptions IEC 61000-4-11	0% UT; 250/300 cycle	0% UT; 250/300 cycle	
Note: UT: rated voltage(s); E.g. 25/30 cycles means 25 cycles at 50Hz or 30 cycles at 60Hz			

Guidance and manufacturer's declaration – electromagnetic immunity			
The E-connect S is intended for use in the electromagnetic environment specified below. The customer or the user of the E-connect S should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Conducted disturbances induced by RF fields IEC 61000-4-6	3 V 0.15 MHz – 80 MHz, 6 V in ISM bands between 0.15 MHz and 80 MHz, 80 % AM at 1 kHz 3 V/m, 80 MHz – 2.7 GHz, 80 % AM at 1 kHz	3 V	Portable and mobile RF communications equipment should be used no closer to any part of the E-connect S , including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.
Radiated RF EM fields IEC 61000-4-3	See the RF wireless communication equipment table in "Recommended minimum separation distances"	3V/m	Recommended minimum separation distances See the RF wireless communication equipment table in "Recommended minimum separation distances"
Proximity fields from RF wireless	See the RF wireless communication equipment table in	Complies	

communication equipment IEC 61000-4-3	"Recommended minimum separation distances"		
---------------------------------------	--	--	--

Recommended minimum separation distances						
Nowadays, many RF wireless equipments have been used in various healthcare locations where medical equipment and/or systems are used. When they are used in close proximity to medical equipment and/or systems, the medical equipment and/or systems' basic safety and essential performance may be affected. The E-connect S has been tested with the immunity test level in the below table and meet the related requirements of IEC 60601-1-2:2014. The customer and/or user should help keep a minimum distance between RF wireless communications equipments and the E-connect S as recommended below.						
Test frequency (MHz)	Band (MHz)	Service	Modulation	Maximum power (W)	Distance (m)	Immunity test level (V/m)
385	380-390	TETRA 400	Pulse modulation 18Hz	1.8	0.3	27
450	430-470	GMRS 460 FRS 460	FM ± 5 kHz deviation 1 kHz sine	2	0.3	28
710	704-787	LTE Band 13, 17	Pulse modulation 217Hz	0.2	0.3	9
745						
780						
810	800-960	GSM 800/900, TETRA 800, iDEN 820, CDMA 850, LTE Band 5	Pulse modulation 18Hz	2	0.3	28
870						
930						
1720	1700-1990	GSM 1800; CDMA 1900; GSM 1900; DECT; LTE Band 1, 3, 4, 25; UMTS	Pulse modulation 217Hz	2	0.3	28
1845						
1970						
2450	2400-2570	Bluetooth, WLAN, 802.11 b/g/n, RFID 2450, LTE Band 7	Pulse modulation 217Hz	2	0.3	28
5240	5100-5800	WLAN 802.11 a/n	Pulse modulation	0.2	0.3	9
5500						

5785			217Hz			
------	--	--	-------	--	--	--

**WARNING**

1. Use of accessories and cables other than those specified or provided by the manufacturer of **E-connect S** could result in increased electromagnetic emissions or decreased electromagnetic immunity of **E-connect S** and result in improper operation.

Cable information:

Cable Name	Cable Length (m)	Shielded or not	Remark
Adapter Cable	1.2	No	/
Measuring Wire	1.5	No	/

2. Use of **E-connect S** adjacent to or stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, **E-connect S** and the other equipment should be observed to verify that they are operating normally.

13.Statement

Service Life

The service life of E-connect S series products is 3 years.

Maintenance

MANUFACTURER will provide circuit diagrams, component part lists, descriptions, calibration instructions to assist to SERVICE PERSONNEL in parts repair.

Disposal

The package should be recycled. Metal parts of the device are disposed as scrap metal. Synthetic materials, electrical components, and printed circuit boards are disposed as electrical scrap. The lithium batteries are disposed as special refuse. Please deal with them according to the local environmental protection laws and regulation.

Rights

All rights of modifying the product are reserved to the manufacturer without further notice. The pictures are only for reference. The final interpretation rights belong to CHANGZHOU SIFARY MEDICAL TECHNOLOGY CO., LTD. The industrial design, inner structure, etc, have claimed for several patents by SIFARY, any copy or fake product must take legal responsibilities.



Changzhou Sifary Medical Technology Co., Ltd.

Add: No. 26 Yandanghe Road, Xinbei District, 213000 Changzhou, Jiangsu, China

Tel: +86-0519-85962691

Fax: +86-0519-85962691

Email: info@sifary.com

Web: www.sifary.com

EU REP

Caretechion GmbH

Tel: +49 211 2398 900

Add: Niederrheinstr. 71, 40474 Düsseldorf, Germany

Email: info@caretechion.de

All rights reserved.